

ITF8204

OLYMPIC DECLINE BENCH OWNER'S MANUAL

25A

CAUTION! Read all precautions and instructions in this manual before using this equipment.

Table Of Contents

CAUTION!

Read all precautions and instructions in this manual before using this equipment.

Important Safety Instructions-----	3
Instructions-----	5
Exploded View and Parts List-----	6
Measurement Guide-----	13
Assembly Instructions-----	14
Assembly-----	15
Adjust Instructions and Exercise Instructions-----	18
Maintenance Schedule-----	19
General Maintenance Information-----	20
Weight Training Tips-----	21

Important Safety Instructions

Before beginning any fitness program, you should obtain a complete physical examination from your physician. When using exercise equipment, basic precautions should always be taken, including the following:

1. Read all instructions before using the equipment.
These instructions are written to ensure your safety and to protect the unit.
2. Use the equipment only for its intended purpose as described in this guide.
Do not use accessory attachments that are not recommended by the manufacturer: such attachments might cause injuries.
3. The product should only be used on a level surface and is with 0.6 meters space around the product.
Do not use the equipment outdoors.
4. Do not allow children on or near the equipment. And children are not allowed to use this equipment.
Teenagers should use this equipment with adult supervision.
5. Do not overexert yourself or work to exhaustion.
Do not attempt to lift more weight than you can control safely.
If you feel any pain or abnormal symptoms, stop your workout immediately and consult your physician.
6. This equipment is not used as medical apparatus and instruments.
7. Never operate the unit when it has been dropped or damaged.
Never drop or insert anything into any opening in the equipment.
Always check the unit and its cables before each use. Make sure that all fasteners and cables are secure and in good working condition.
Frayed or worn cables can be dangerous and may cause injury. Periodically check these cables for any indication of wear.
Keep hands, limbs, loose clothing and long hair well out of the way of moving parts.
8. Be careful when getting on or off the equipment.
9. Wear proper exercise clothing and shoes for your workout, no loose clothing.


Important Safety Instructions

Personal Safety During Assembly

Read each step in the assembly instructions and follow the steps in sequence. Do not skip ahead. If you skip ahead, you may learn later that you have to disassemble components and that you may have damaged the equipment.

Assemble and operate the equipment on a solid, level surface. Locate the unit a few feet from walls or furniture to provide easy access. The equipment is designed for your enjoyment. By following these precautions and using common sense, you will have many safe and pleasurable hours of healthful exercise with the equipment.

Training Area and Free Area

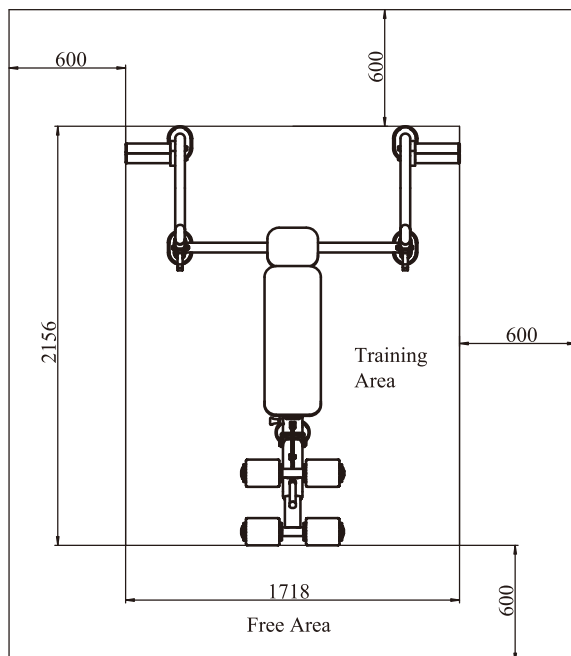

Specifications

Class: S

Maximum User Weight: 150kg/ 330lbs

Maximum Training Load: 220kg/ 485lbs

Maximum Weight Load For Each

Storage Horn: 100kg/ 220lbs

Product Dimension: 1718*2156*1254mm

Product Total Surface: 1718*2156mm

Product Total Mass:

Instructions

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only our replacement part when servicing. Failure to do so will void your warranty and could result in personal injury.

The equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

Tools Required




Ratchet Wrench and Socket



Adjustable Wrench



Rubber Mallet

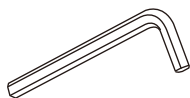

Hex Key Wrench Set



Phillips Screwdriver


Exploded View and Parts List

Overall

ItemNo.	Part No.	Description	QTY
1	ITF820401ASSY	Back Cushion Frame ASSY	1
2	ITF820402ASSY	Swing Frame ASSY	1
3	ITF840208ASSY	Foam Pipe ASSY	2
4	ITF820201ASSY	Side Stand Frame I ASSY	1
5	ITF82020200	Connecting Frame	1
6	ITF820203ASSY	Side Stand Frame II ASSY	1
7	ITF81025100	Head Cushion	1
8	ITF82015100	Back Cushion	1
9	IT90021700V1TKO	Short Foam	4
10	ITF82020203	Connecting Arc I 170	2
11	ITF82020504	Connecting Arc I 210	1
12	SL70462300	Shaft Φ 25.4*119.5	1
13	ITF820204ASSY	Barbell Frame ASSY	4
14	CNLM10*40*40DS20NL	Flat Head Cap Screw M10*40	4
15	GB70BTM12*30DN18	Socket Head Cap Screw M12*30	4
16	CNLM8*30DHS20	Flat Head Cap Screw M8*30	1
17	GB70BTM10*80DN18	Socket Head Cap Screw M10*80	6
18	GB70BTM10*130DN18	Socket Head Cap Screw M10*130	6
19	GB70BTM10*35DN18	Socket Head Cap Screw M10*35	6
20	HDQ10DN2	Curved Washer Φ 11* Φ 21*1.5	12
21	GB9510DN2	Flat Washer Φ 11* Φ 20*2	18
22	GB958DHS2	Flat Washer Φ 9* Φ 16*1.6	1
23	GB9512DN2	Flat Washer Φ 13* Φ 24*2.5	4
24	GB9310N19	Spring Washer Φ 10	6
25	GB9312N19	Spring Washer Φ 12	4
26	NM8DHS2	Nylon Lock Nut M8	1
27	NM10DN2	Nylon Lock Nut M10	12
28	HF985A1500	Buffer Pad Φ 76* Φ 42*25	4
29	IT70165000	Combined Aluminum Retaining Ring	8
30	IT90041700	Aluminum Cap Φ 60	4
31	IN-D21202000	Aluminum Cap Φ 38	2
32	XL2-40001400	Buffer Pad Φ 25.4*9.5	1
33	GB77M8*10DS18NL	Socket Set Screw M8*8	2
34	NBS4DHS	Hex Key S=4	1
35	NBS5DHS	Hex Key S=5	1
36	NBS6DHS	Hex Key S=6	1
37	NBS8DHS	Hex Key S=8	1
38	CNLM10*30*30DS20NL	Flat Head Cap Screw M10*30	2


Exploded View and Parts List

Overall

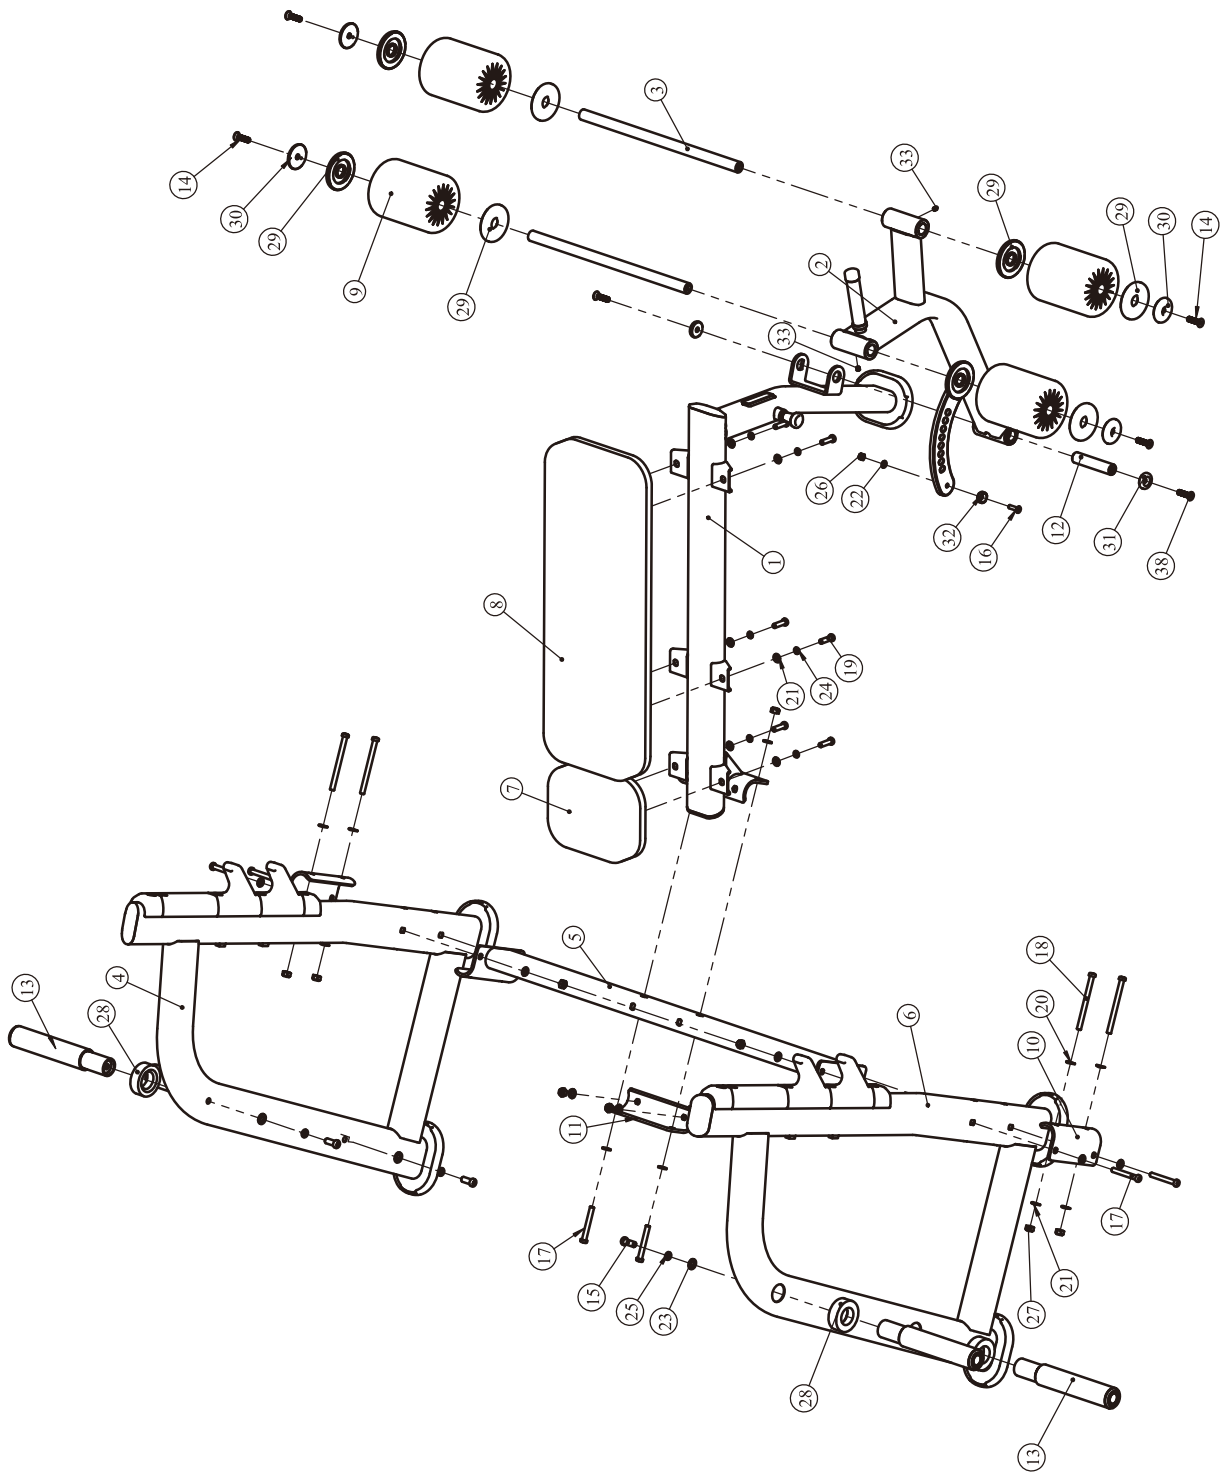

Exploded View and Parts List


Back Cushion Frame ASSY

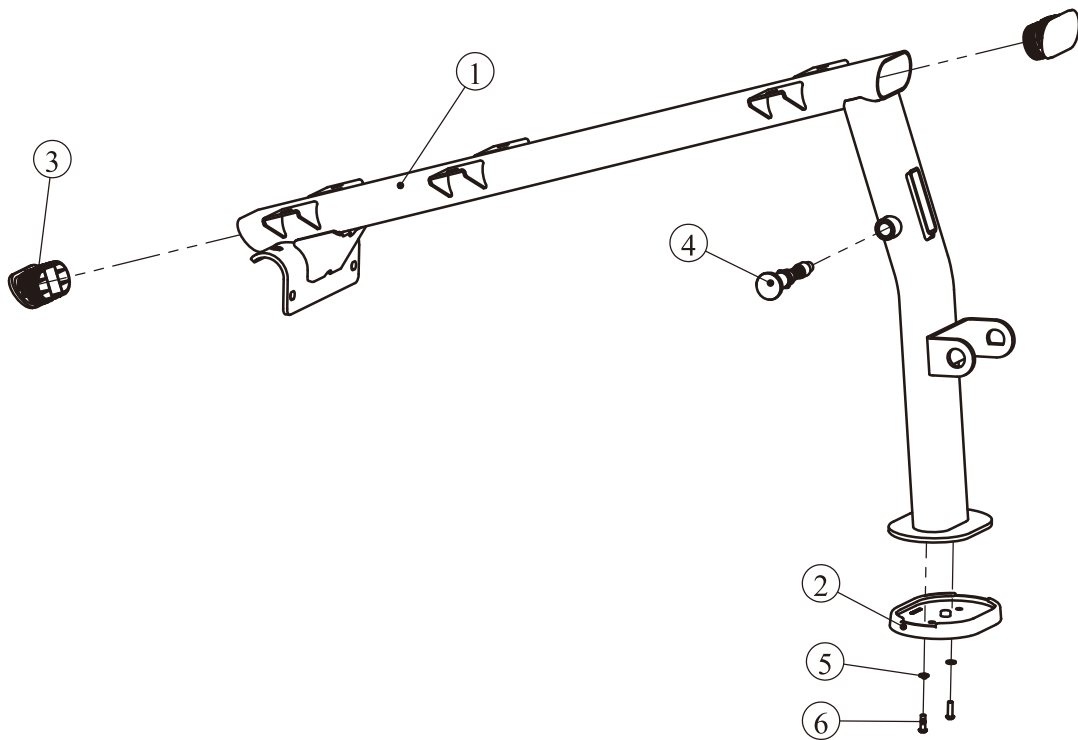

GradeNo.	Part No.	Description	QTY
1.1	ITF82040100	Back Cushion Frame	1
1.2	ITF88013200	Floor Mat	1
1.3	ITF88013100	Pipe Plug	2
1.4	ITF820109ASSY	Plug Pin ASSY	1
1.5	GB956DHS2	Flat Washer $\Phi 6.6 * \Phi 12 * 1.6$	2
1.6	PNLM6*20DHS20NL	Button Head Cap Screw M6*20	2

Exploded View and Parts List


Swing Frame ASSY

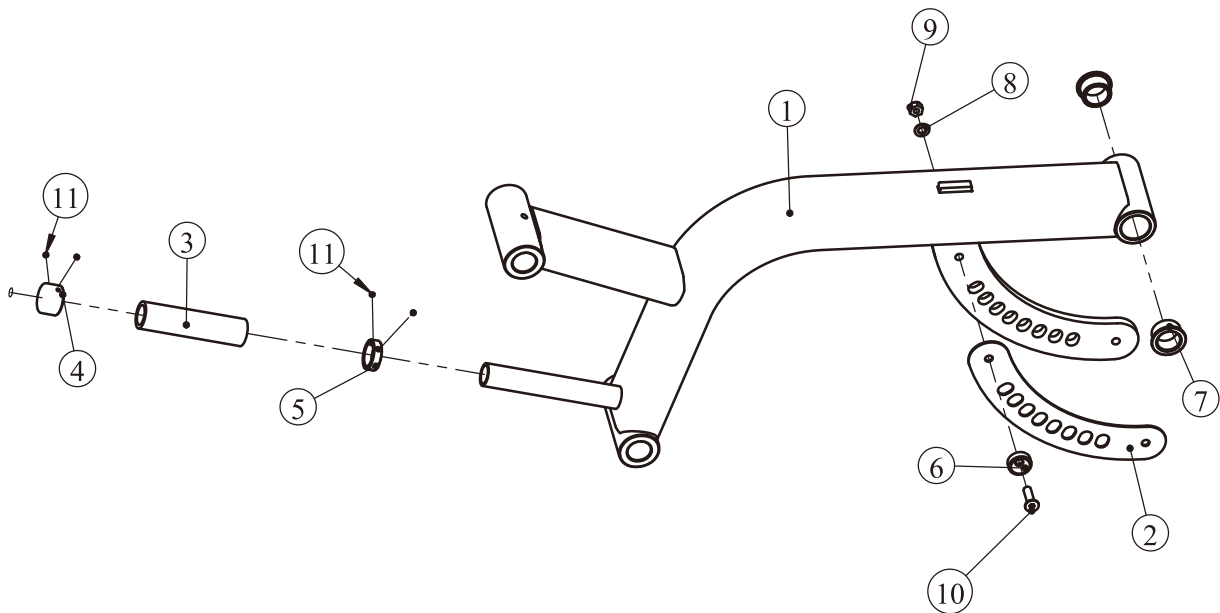


GradeNo.	Part No.	Description	QTY
2.1	ITF82040200	Swing Frame	1
2.2	SL70411700	Back Veneer	1
2.3	CWRVL0151800	Grip ST Φ 30* Φ 22*120	1
2.4	V39600	Aluminium Grip Cap Φ 25.4	1
2.5	V39500	Aluminium Grip Ring Φ 25.4	1
2.6	XL2-40001400	Buffer Pad Φ 25.4*9.5	1
2.7	M02502000	Copper Bushing Φ 38* Φ 32* Φ 25.4*18	2
2.8	GB958DHS2	Flat Washer Φ 9* Φ 16*1.6	1
2.9	NM8DHS2	Nylon Lock Nut M8	1
2.10	CNLM8*30DHS20	Flat Head Cap Screw M8*30	1
2.11	YZGB7710-32*3.2N19	Socket Set Screw 10-32UNF*3.2	4

Exploded View and Parts List

Foam Pipe ASSY

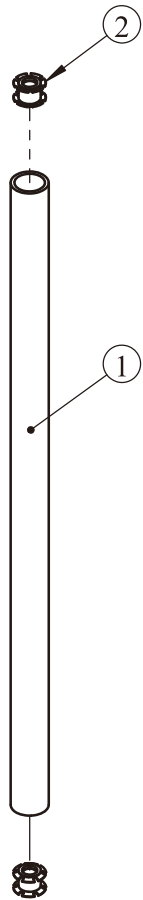

Barbell Frame ASSY

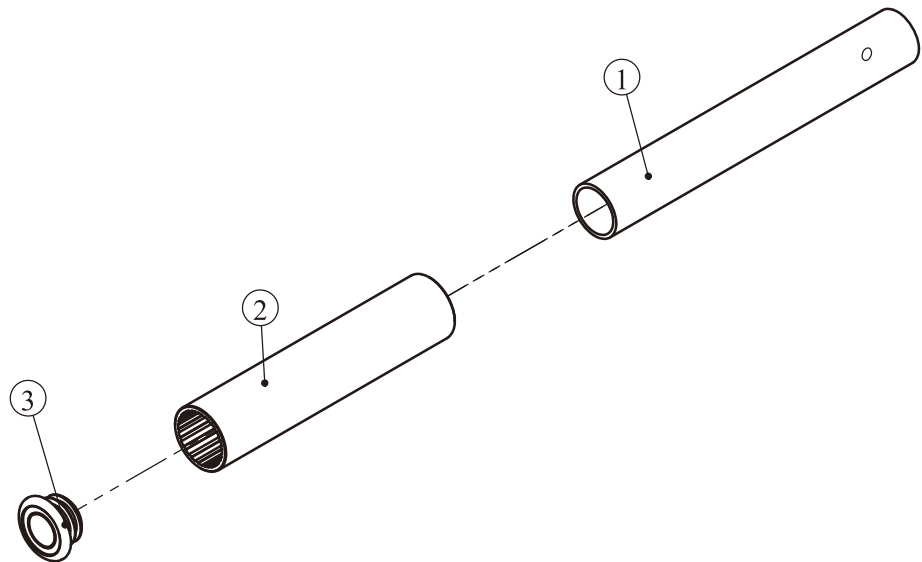


GradeNo.	Part No.	Description	QTY
3.1	ITF84020801	Foam Pipe	1
3.2	IF81165000	Lock Nut	2

GradeNo.	Part No.	Description	QTY
13.1	ITF82020400	Barbell Frame	1
13.2	BB-SQ3900	Barbell Casing $\Phi 50 * \Phi 42.1 * 225$	1
13.3	IFP12013500	Pipe Plug $\Phi 49 * \Phi 37 * 25$	1

Exploded View and Parts List


Side Stand Frame I ASSY

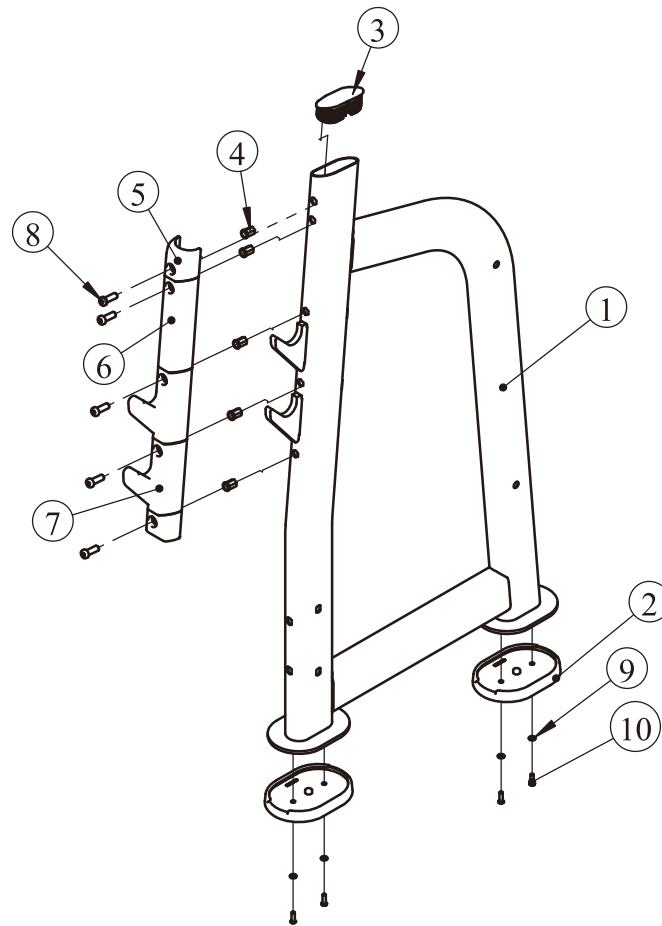

GradeNo.	Part No.	Description	QTY
4.1	ITF82020100	Side Stand Frame I	1
4.2	ITF88013200	Floor Mat	2
4.3	ITF88013100	Pipe Plug	1
4.4	GB17880.5M10*19.5DS17	Hexagon Rivet Nuts With Flat HeadM10*19.5	5
4.5	ITF82023100	End Plastic Sheath	2
4.6	ITF82023400	Long Plastic Sheath	1
4.7	ITF82023500	Plate Plastic Sheath	2
4.8	GB70BTM10*30DHS18	Socket Head Cap Screw M10*30	5
4.9	GB956DHS2	Flat Washer $\Phi 6.6 * \Phi 12 * 1.6$	4
4.10	PNLM6*20DHS20NL	Button Head Cap Screw M6*20	4



Exploded View and Parts List

Side Stand Frame II ASSY

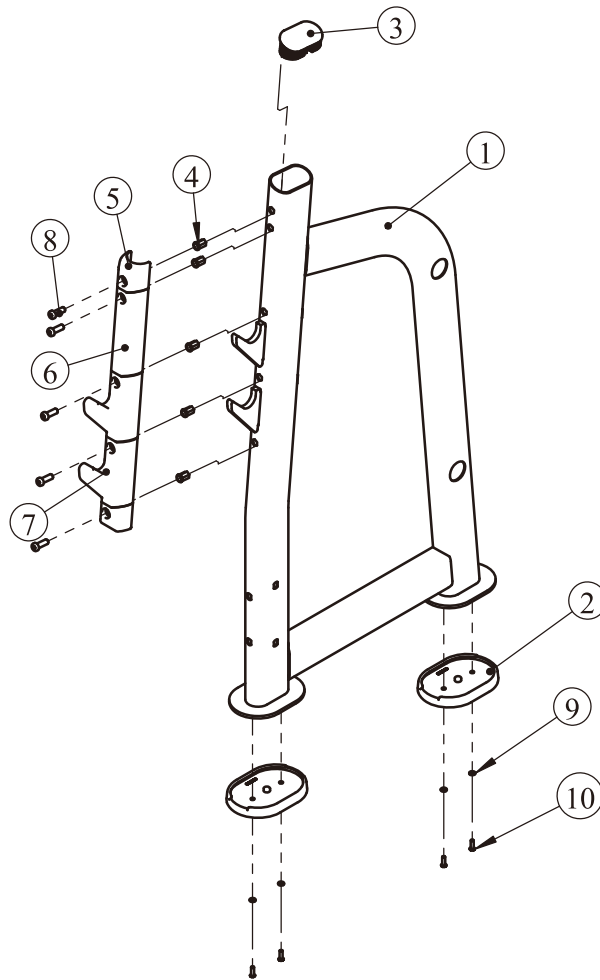

GradeNo.	Part No.	Description	QTY
6.1	ITF82020300	Side Stand Frame II	1
6.2	ITF88013200	Floor Mat	2
6.3	ITF88013100	Pipe Plug	1
6.4	GB17880.5M10*19.5DS17	Hexagon Rivet Nuts With Flat HeadM10*19.5	5
6.5	ITF82023100	End Plastic Sheath	2
6.6	ITF82023400	Long Plastic Sheath	1
6.7	ITF82023500	Plate Plastic Sheath	2
6.8	GB70BTM10*30DHS18	Socket Head Cap Screw M10*30	5
6.9	GB956DHS2	Flat Washer $\Phi 6.6 * \Phi 12 * 1.6$	4
6.10	PNLM6*20DHS20NL	Button Head Cap Screw M6*20	4

Measurement Guide

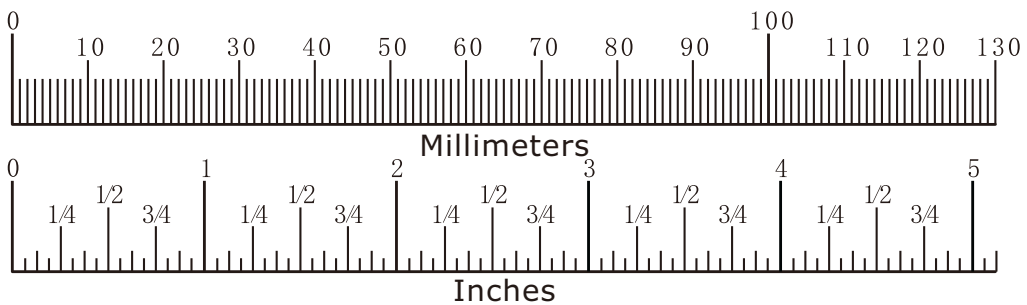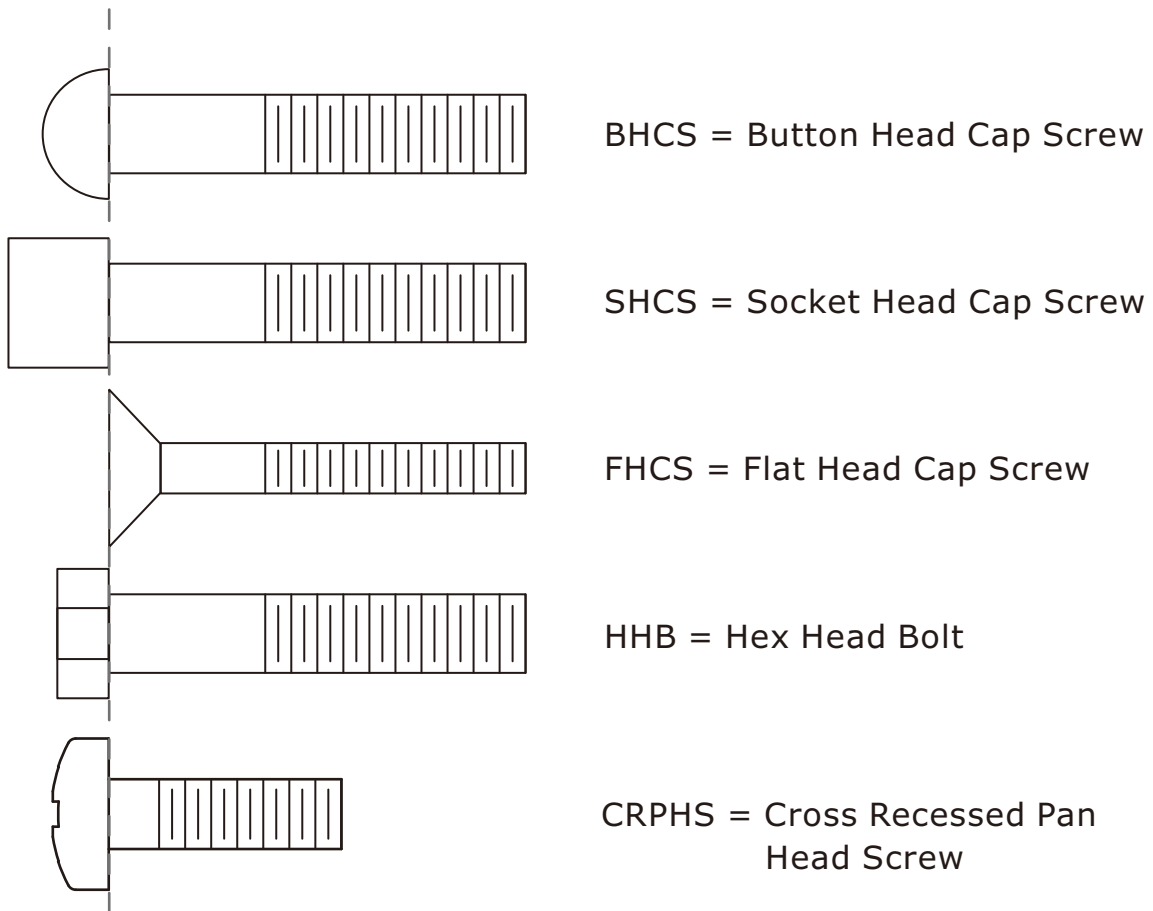

Diameter of bolt (mm/inch)	M6(1/4")	M8(5/16")	M10(3/8")	M12(1/2")	M16(5/8")
Tightening torque (N.m)	9~12	22~30	45~59	78~104	193~257
Operational methods for adult men	The strength of the wrist	The strength of the wrist and forearm	The strength of the entire arm	The strength of the arm and upper body	with all strength

Assembly Instructions

Assembly of the equipment takes professional installers about 2 hours. If this is the first time you have assembled this type of equipment, plan to spend more time. It is strongly recommended to assemble the equipment by professional installers. You may find it quicker, safer, easier to assemble this equipment with the help of a friend, as some of components may be large, heavy or awkward to handle alone. It is important that you assemble your product in a clean, clear, uncluttered area. This will enable you to move around the product while you are fitting components and reduce the possibility of injury during assembly.

NOTE

As with any assembled part, proper alignment and adjustment is critical. While tightening the fasteners, be sure to leave room for adjustments. Do not fully tighten the fasteners until instructed to do so. Be careful to assemble the components in the sequence presented in this guide.

Assembly

STEP 1

Attach one Side Stand Frame I ASSY (#4) and one Side Stand Frame II ASSY (#6) to one Connecting Frame (#5), using:

Four M10*80 Socket Head Cap Screw (#17)


Eight $\Phi 11*\Phi 20*2$ Flat Washer (#21)

Eight M10 Nylon Lock Nut (#27)

Four M10*130 Socket Head Cap Screw (#18)

Eight $\Phi 11*\Phi 21*1.5$ Curved Washer (#20)

Note: Finger Tighten All Bolts and Nylon Lock Nuts.

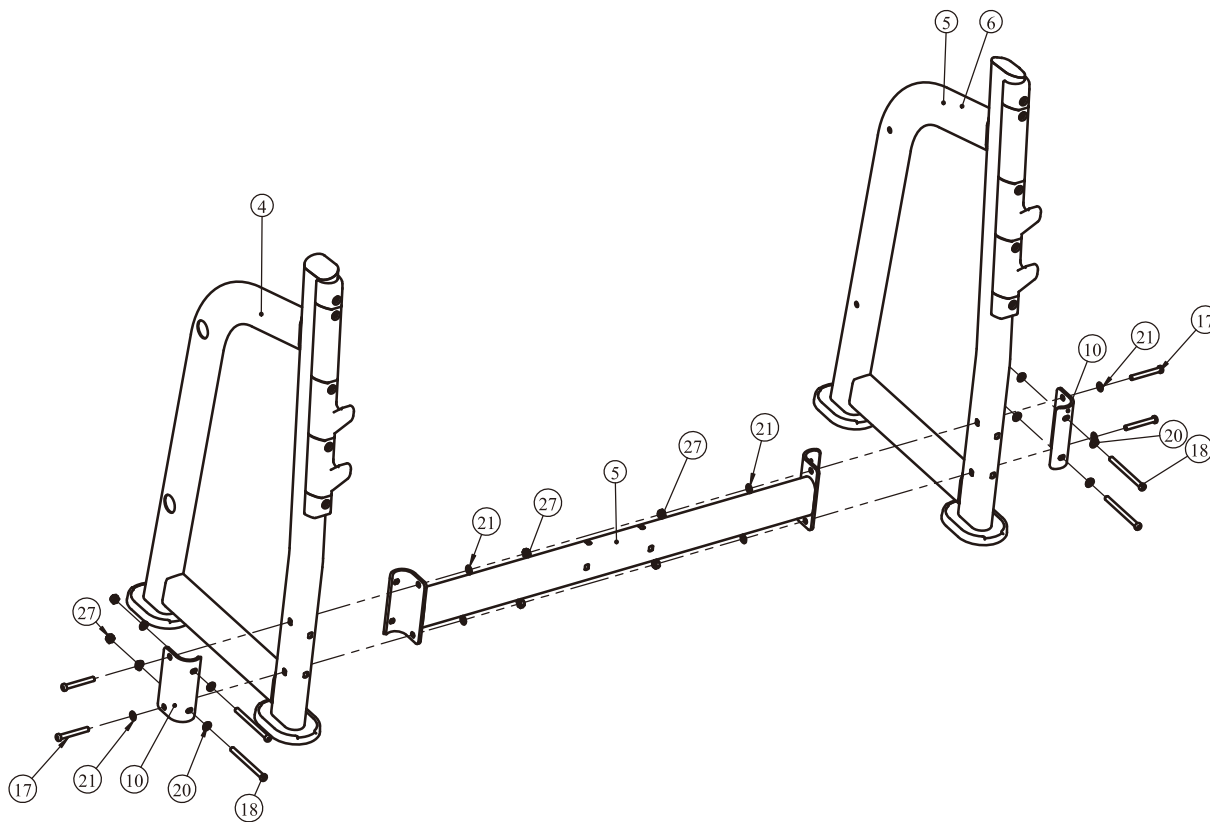


Assembly

STEP 2

1. Attach one Back Cushion Frame ASSY (#1) and one Connecting Arc 210 (#11) to one Connecting Frame (#5), using:
 - Two M10*80 Socket Head Cap Screw (#17)
 - Four $\Phi 11*\Phi 20*2$ Flat Washer (#21)
 - Four M10 Nylon Lock Nut (#27)
 - Two M10*130 Socket Head Cap Screw (#18)
 - Four $\Phi 11*\Phi 21*1.5$ Curved Washer (#20)
2. Attach one Swing Frame ASSY (#2) to Back Cushion Frame ASSY (#1), using:
 - Two M10*30 Flat Head Cap Screw (#38)
 - Two $\Phi 38$ Aluminum Cap (#31)
 - One $\Phi 25.4*119.5$ Shaft (#12)
 - One M8*30 Flat Head Cap Screw (#16)
 - One $\Phi 25.4*9.5$ Buffer Pad (#32)
 - One $\Phi 9*\Phi 16*1.6$ Flat Washer (#22)
 - One M8 Nylon Lock Nut (#26)
3. Attach four Short Foam (#9) to one Swing Frame ASSY (#2), using:
 - Two $\Phi 25.2*2.5*504$ Foam Pipe ASSY (#3)
 - Eight $\Phi 90$ Combined Aluminum Retaining Ring (#29)
 - Four $\Phi 60$ Aluminum Cap (#30)
 - Four M10*40 Flat Head Cap Screw (#14)

Note: Wrench Tighten All Bolts.

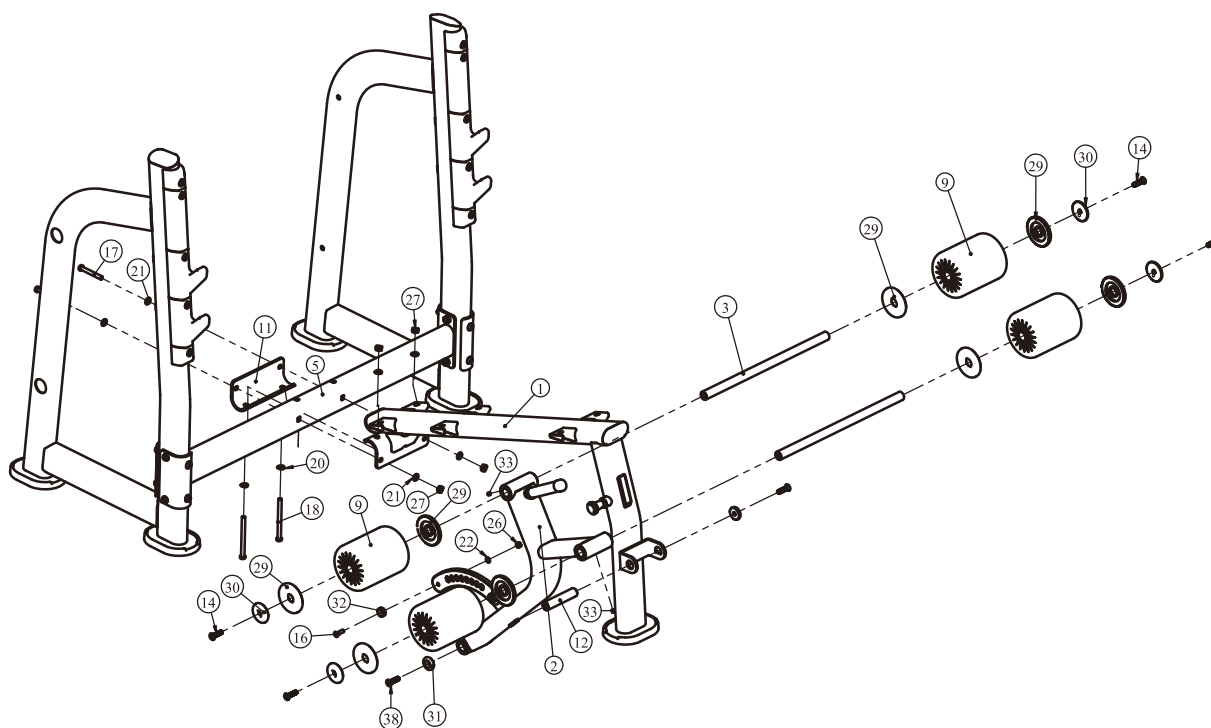


Assembly

STEP 3

1. Attach one Back Cushion (#8) and one Head Cushion (#7) to one Back Cushion Frame ASSY (#1), using:
 - Six M10*35 Socket Head Cap Screw (#19)
 - Six Φ 10 Spring Washer (#24)
 - Six Φ 11* Φ 20*2 Flat Washer(#21)
2. Attach four Barbell Frame ASSY (#13) to one Side Stand Frame I ASSY (#4) and one Side Stand Frame II ASSY (#6), using:
 - Four M12*30 Socket Head Cap Screw (#15)
 - Four Φ 12 Spring Washer (#25)
 - Four Φ 13* Φ 24*2.5 Flat Washer (#23)
 - Four Φ 76* Φ 42*25 Buffer Pad (#28)

Note: Wrench Tighten All Bolts.

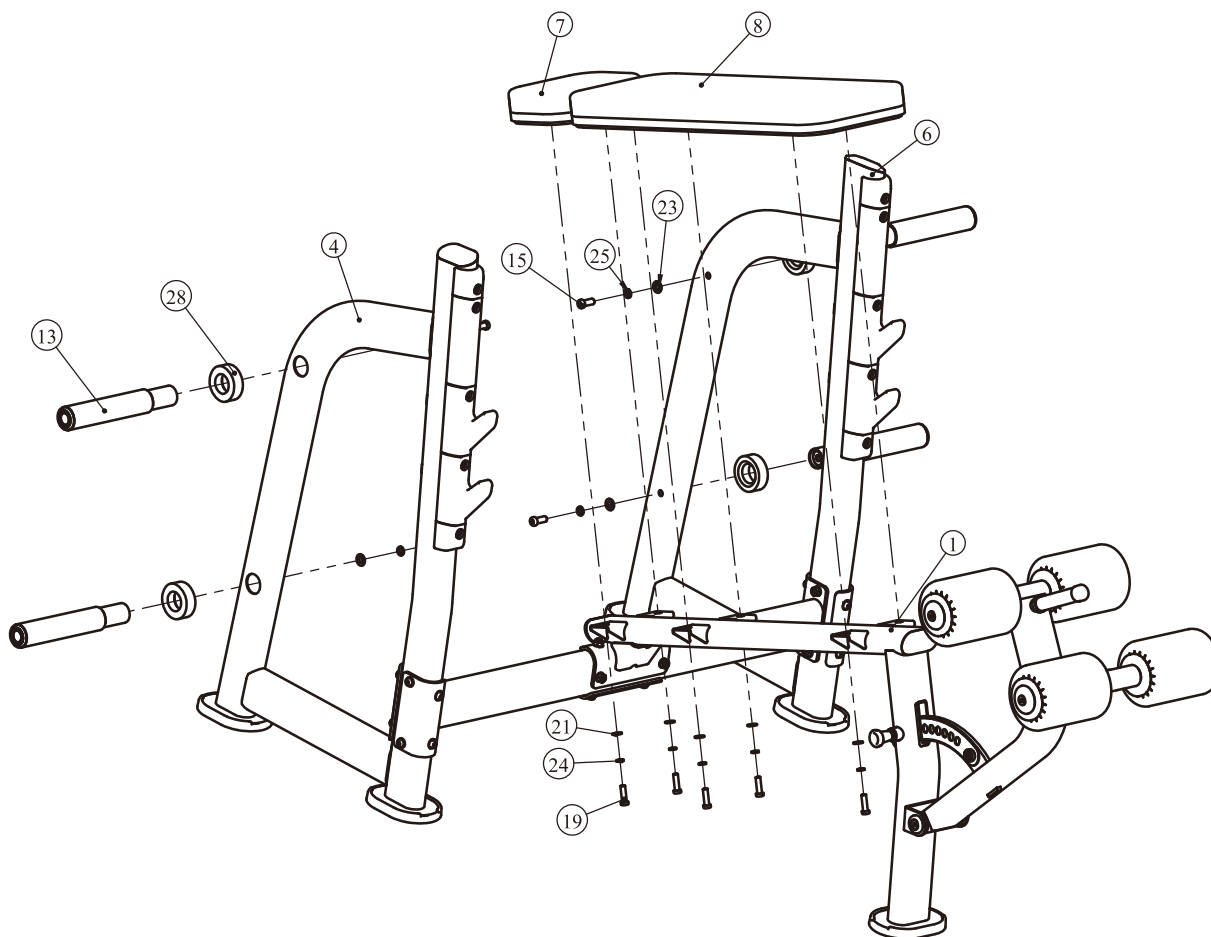


Adjust Instructions and Exercise Instructions

Leg Pad adjustment

1. Pull the Spring Pin and adjust the Short Foam to the desired position.
2. Make sure that the Spring Pop pin gets into the hole completely.

Exercise Instructions

1. Lie on pad and do chest press with barbell.
2. The total weight can not be greater than 220kg.
3. This equipment does not contains Barbell and Weight Plate.

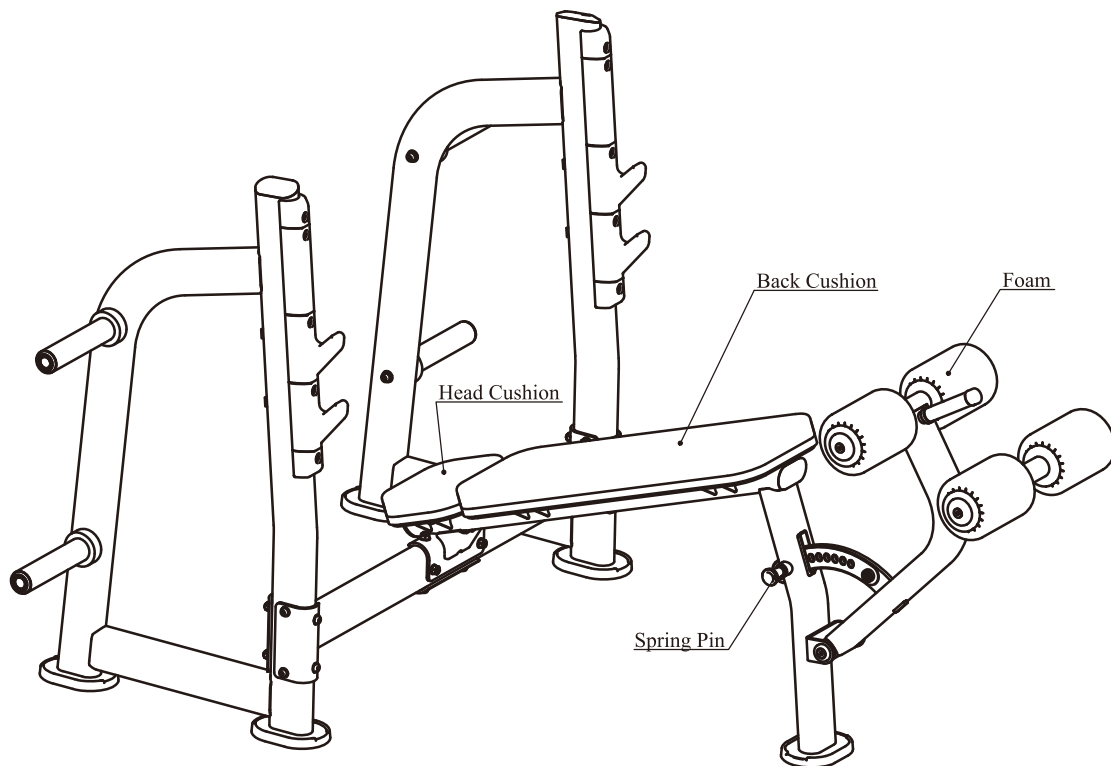

Maintenance Schedule

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY						
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY							
Clean; Upholstery	DAILY	WEEKLY							
Inspect; Cables or Belts and their tension	DAILY	WEEKLY							
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS							
Inspect; All Decals	WEEKLY	3 MONTHS							
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS							
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS							
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS							
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS							
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY							
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY							
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS							

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

General Maintenance Information

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- * Check all pieces for signs of visible wear or damage.
- * Check springs in snap hooks and pull-pins for proper tension and alignment.
- * If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- * To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- * Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- * Replace ripped or worn upholstery immediately.
- * Keep sharp or pointed objects clear of all upholstery.

Decals:

- * Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- * Inspect all nuts and bolts for any loosening and tighten if needed.
- * Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- * These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- * We use only high quality belt, and mil-spec cables.
- * Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- * While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- * Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- * Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- * Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- * Wipe down adjusting tubes with a dust free rag before applying lubricant.
- * Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- * Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. Repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

Weight Training Tips

Use this manual to guide you through the basic exercises you can perform on your equipment. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your equipment, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

